

Check out our credentials



Made with plant-based
& biodegradable ingredients*

*This formula is made with a % of plant-based & biodegradable ingredients in addition to other ingredients.

EN Contains amongst other ingredients: <5% Non-Ionic Surfactants. For a full list of ingredients, go to ecozone.com

EN Ecozone does not assume any responsibility for damage resulting from using this product. If your machine is more than two years old and has never been descaled, please consult the manufacturer before using this product. Older parts and seals may have become brittle and leak after scale is removed.

Medical Personnel can request the data sheet via +31 36 54 94 777

EN PRECAUTION. Keep out of reach of children. **IF IN EYES:** Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. If eye irritation persists: Get medical advice/attention. If medical advice is needed, have product container or label at hand.



For more information
www.ecozone.com
f@ecozoneuk
@ecozoneproducts



Please
recycle

UK address:
HG Hagesan (UK) Ltd,
Weston Business Centre, Par-
sonage Road,
Takeley, Essex, CM22 6PU
Tel: +44 (0) 1206 822 744

EU address:
HG International b.v.
P.J. Oudweg 41,
1314 CJ Almere,
The Netherlands.
Tel: +31 36 54 94 700



5 060101 530467 >

EXP

ecozone®
Since 2000

odour & taste free coffee machine cleaner

- ✓ Deep cleans & descales all coffee machine types.
- ✓ Helps to maintain appliance performance & lifetime.
- ✓ Odour, taste free & non-toxic solution.
- ✓ Made with plant-based & biodegradable ingredients*

How to use

Always check the appliance manual & manufacturers guidance before descaling an appliance.

1. Empty all coffee/take all filters out of the machine.
2. Measure 100ml of cleaner in a measuring cup & pour into the water tank.
3. Fill tank with clean water.
4. Run the machine once through with the solution, until tank is empty.

For heavily scaled machines, you may leave it overnight before following step 5.

5. Fill the water tank again with clean water & run through. Repeat this action 3-4 times to ensure solution is fully flushed out of machine. **Do not use machine until you have finished step 5.**



More about our Coffee Machine Cleaner

Ecozone's Coffee Machine Cleaner works with all coffee machines. The powerful solution with plant-based ingredients* cuts through any lingering limescale & coffee build-up, leaving a spotless & residue-free appliance. In addition, the formula leaves no taste or odour behind. This descaler provides five uses.