

ecozone
Since 2000

multi-purpose appliance descaler

- ✓ Multi-purpose for various appliances.
- ✓ Fast acting & removes tough limescale in minutes.
- ✓ Helps to prolong appliance performance & lifetime.
- ✓ Made with plant-based & biodegradable ingredients*.

How to use

Check the dosage table for the correct measurements of solution.

For appliances: Follow your appliance manufacturers guide to descaling.



Or for soaking & cleaning surfaces: Apply the diluted solution via your preferred method to the affected surface area. Leave for a few minutes (longer for heavily scaled surfaces). Scrub, then rinse away.



Appliance dosage instructions	Solution/Water
Kettles	100 ml / 400ml
Washing Machines	200ml direct in compartment
Dishwashers	200ml direct on floor of dishwasher
Irons, fabric steamers, steam mops, food steamers, coffee machines	100ml / Full Tank

For soaking & surfaces	Solution/Water
Shower heads, flasks, nozzles, extension parts	100ml / Submerged in water
Taps, splash backs, sinks, tiles etc.	100ml / 500ml

More about our Appliance Descaler

Ecozone's Multi-purpose Appliance Descaler is powerful & fast-acting. The non-toxic formula made with plant-based ingredients* can be used in kettles, coffee machines, food steamers, fabric steamers & more. The solution cuts through tough scale & residue with ease & helps to maintain appliances, keeping them performing at their best.

Check out our credentials



Made with plant-based & biodegradable ingredients*

*This formula is made with a % of plant-based & biodegradable ingredients in addition to other ingredients.

EN Contains amongst other ingredients: <5% Non-Ionic Surfactants. For a full list of ingredients, go to ecozone.com

EN Do not use on marble, natural stone or enamel surfaces. Always test on an inconspicuous area first. Never leave appliances unattended while descaling. Never soak electrical items. Ensure coffee machines, dishwashers & washing machines are emptied before descaling. Never boil the kettle with solution inside, always boil the water first, then add solution afterwards. Always rinse kettles, coffee machines & other food/drink containers thoroughly after descaling. Always check the appliance manual & manufacturers guidance before descaling an appliance. For more tips on descaling items, visit ecozone.com.

Medical Personnel can request the data sheet via +31 36 54 94 777



WARNING

EN Causes serious eye irritation. Keep out of reach of children.
IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. If eye irritation persists: Get medical advice/attention. If medical advice is needed, have product container or label at hand. Wash hands and exposed skin thoroughly after handling.

UFI: HH02-C00Y-T006-DM21

ecozone
a British brand

For more information
www.ecozone.com
f @ecozoneuk
@ecozoneproducts



UK address:
HG Hagesan (UK) Ltd,
Weston Business Centre,
Parsonage Road,
Takeley, Essex, CM22 6PU
Tel: +44 (0) 1206 822 744

EU address:
HG International b.v.
P.J. Oudweg 41,
1314 C.J Almere,
The Netherlands
Tel: +31 36 54 94 700



A P P