



ecozone[®]

Since 2000

BIOActive
laundry liquid

How to use

Check the washing instructions for your clothes. Use the table below and add the correct dosage to your machine drawer. Wash as usual.

Dosing instructions

For 4.5 KG	Light - Normal soiling	Heavy soiling
soft/medium water	35 ml	52 ml
hard water	52 ml	70 ml
For 7 KG	10 ml extra	
For handwash	25 ml per 10 L	

More about this product

✓ Tough on stubborn dirt
✓ Effective at 30 degrees
✓ For preserving colours and shape

Ingredients ≥5-15% anionic surfactants, non-ionic surfactants, soap

Also: optical brighteners, enzymes, perfumes, preservation agents: Phenoxethanol

This product is not intended for large-scale cleaning.

DANGER H318 - Causes serious eye damage. **P101** - If medical advice is needed, have product container or label at hand. **P102** - Keep out of reach of children. **P280** - Wear eye protection. **P305+P351+P338** - IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. **P310** - Immediately call a POISON CENTER, a doctor.

Contains: Alcohols, C12-14, ethoxylated, sulfates, sodium salts, CASn: 68891-38-3; Deceth-8, CASn: 26183-52-8; Alkyl, C10-16, polyglucoside CASn: 110615-47-9

UFI: NSTK-VR3D-V40J-UW7P

EU Ecolabel: BE/006/006

UK address: HG Hogeslan (UK) Ltd,
Weston Business Centre, Parsonage Road,
Tatley, Essex, CM22 6PU
Tel: +44 (0) 1206 822 744

For more information:
www.ecozone.com
@ecozoneuk

#ecozoneproducts

EU address: HG International b.v.
P.J. Oudweg 41, 1314 CJ Almere,
The Netherlands
Tel: +31 36 54 94 700

Art. 2006150106

1.5L e



5 060101 534885