



ecozone[®]
Since 2000

PowerAction
kitchen cleaner

How to use

Turn the nozzle to the ON Position. Spray the liquid liberally on the surface to be cleaned and leave to work for a few minutes. Wipe clean with water and dry. Turn the nozzle to the OFF position. **Attention:** On fragile surfaces: first try on an inconspicuous area.



More about this product

- ✓ Cleaner and degreaser
 - ✓ Tough on grease and oil
 - ✓ Leaves a fresh fragrance
- Recycle with the cap on.



Ingredients <5% non-ionic surfactants; soap; also perfumes. This product is not intended for large-scale cleaning.

WARNING H319 - Causes serious eye irritation. **P101** - If medical advice is needed, have product container or label at hand. **P102** - Keep out of reach of children. **P260** - Do not breathe mist. **P264** - Wash hands thoroughly after handling. **P280** - Wear eye protection. **P305+P351+P338** - IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. **P337+P313** - If eye irritation persists: Get medical advice/attention.



UFI: FF7X-VAEK-EM1A-PFCJ

EU Ecolabel: BE/020/014

UK address: HG Hageston (UK) Ltd,
Weston Business Centre, Parsonage Road,
Tatistrey, Essex, CM22 6PU
Tel: +44 (0) 1206 822 744

EU address: HG International b.v.
P.O. Box 41, 1314 CJ Almere,
The Netherlands
Tel: +31 36 54 94 700

For more information
www.ecozone.com
in @ecozoneuk
in @ecozoneproducts



Art. 2004075106
750ml e