

# washing machine & dishwasher cleaner





- Cleans, descales & helps reduce odours in washing machines & dishwashers.
- Protects & maintains appliances & pipework.
- Keeps machines performing at their best.
- Made with fragrance free, plant-based & biodegradable ingredients\*.

# Check out our credentials

"This formula is made with a % of plant-based & blodegradable ingredients in addition to other ingredients



 
# How to use

I. Place one tablet into the drum of your appliance. 2. Run an empty wash on 60°c.

3. Descale monthly to keep your appliance free from limescale & performing efficiently. Do not unwrap the tablet.



Washing machines & dishwashers



## More about our Washing Machine & Dishwasher Cleaner

Ecozone's Washing Machine & Dishwasher Cleaner helps to protect appliances for up to 6 uses. Specially formulated to clean & descale, by getting rid of stubborn limescale & detergent that has built up over time in the drum & pipework. It will also help to keep appliances free from nasty odours. Simply use one tablet every month on a hot empty wash to keep appliances performing efficiently.



UK address:
HG Hagesan (UK) Ltd.
Weston Business Contre.
Parsonage Road:
Takeley, Essex. CM22 6PU
Tak +442 (0) 1206 822 744
Tek +43 354 94700

EN ingredients: Non knic Surfactant <5%, Oxygen Based Bleach > 5% but <15%. For a tull list of ingredients visit ecozone.com.

Medical Personnel can request the data sheet via +31 36 54 94 777



B) Causes serious eye Irifation. If medical achieve in needed, please have the product controlene or label of hand. Keep out of reach of children. If IP 1975: Rines coultously with water for several minutes. Remove contro

UFI: J720-10MQ-H000-MS6N

(6x20g) 120g €